

 


ezviz™

Vault Live

Quick Start Guide
Kiirjuhend


Box Contents

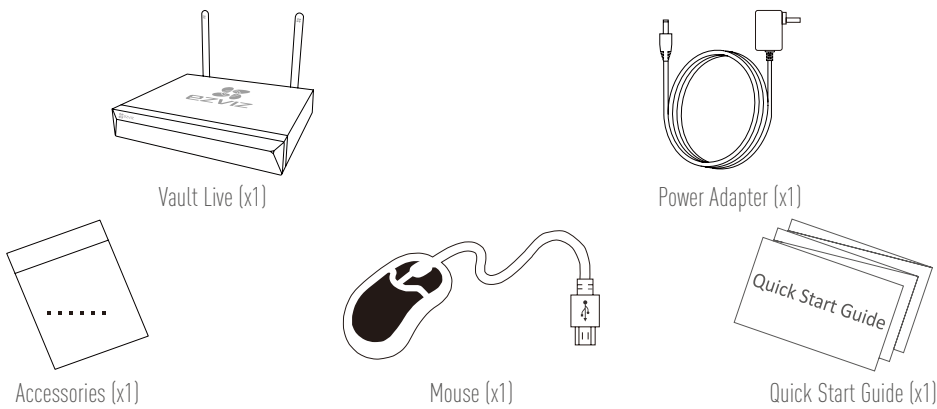

i For models equipped with HDDs, the accessories are not included in the box contents.

Product View

Rear Panel Overview

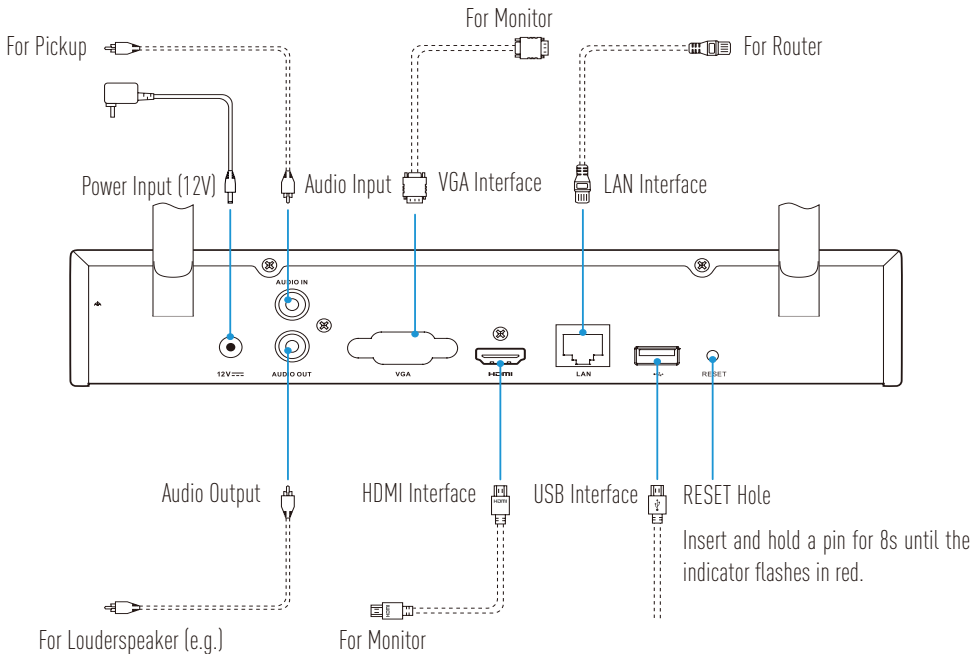


i The cables with dotted lines above are not included.

Wiring



i If you want to install HDD by yourself, refer to [Appendix](#).

Cable Connection

1. Connect the LAN interface of Vault Live to that of router using network cable.
2. Connect the mouse to the USB interface of Vault Live.

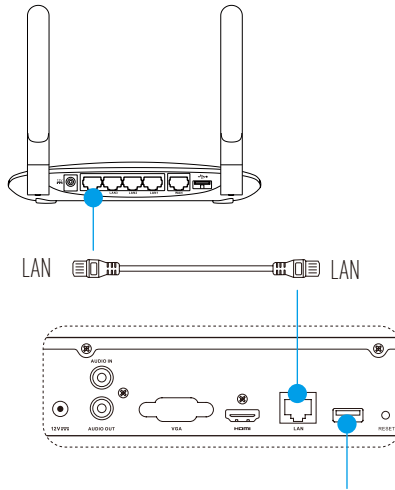

3. Connect Vault Live to the Monitor using VGA or HDMI cable.

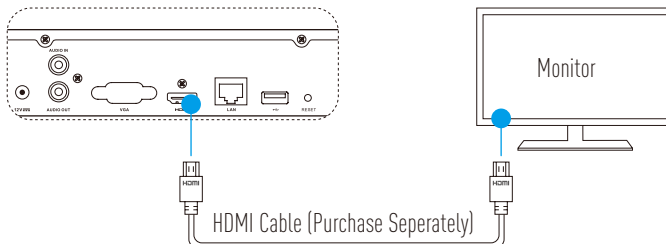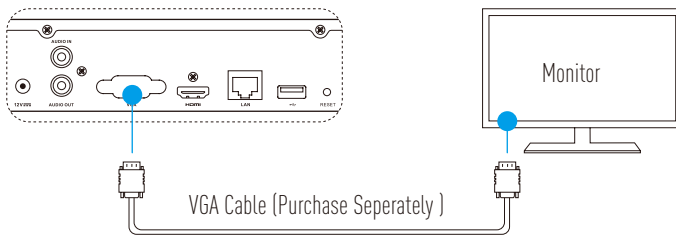


i Choose the corresponding signal source of the Monitor according to different connections.

Powering on

i The camera should be within 10m (32.8ft) from the Vault Live.

1. Power on the Vault Live using power adaptor and power socket.

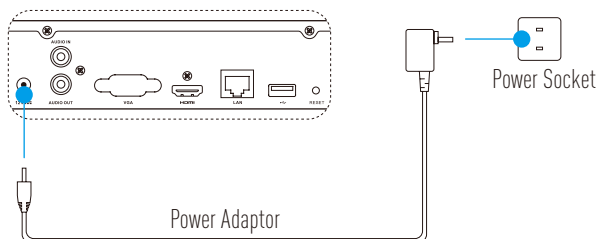


i Use stable power supply to avoid device exception or even damage.

2. Wait until the Wizard interface appears on the Monitor and set the password (For First Time Access).
3. Log in the Vault Live.

(Optional) Shutdown

1. In the operation interface of Vault Live (Monitor), go to **Shutdown by Menu** → **Shutdown** and click it.

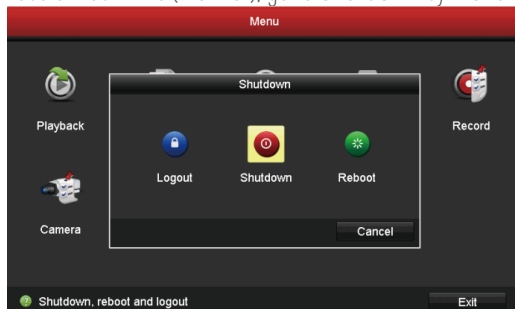

2. Click **Yes**.

i For device protection, do not power off when it is still working.


Linkage

Linking through Monitor

Power on all devices before you start.


Quick Linkage for Wireless Camera

i Restore the camera if it has been connected to Wi-Fi before

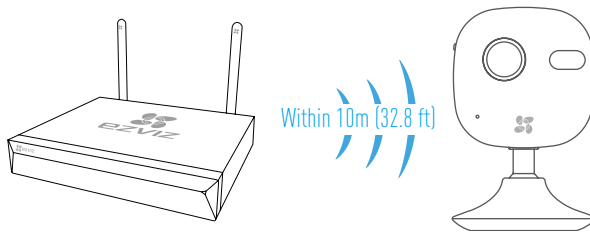

Option 1:

1. Go to **Camera Management** by **Menu → Camera**.

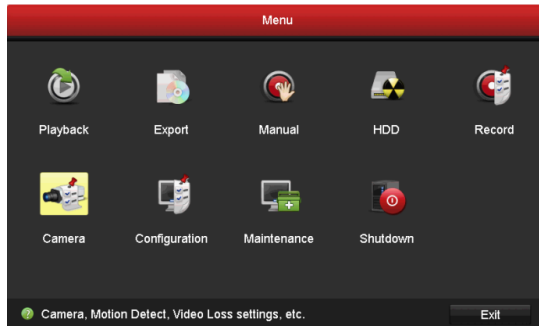

2. When camera is ready to connect Wi-Fi, click **Search**.

 The camera will automatically connect to the Vault Live.

3. Click "+" to add linked camera.


Option 2:

- A. Connect camera to the Wi-Fi from Vault Live's uplink router or switch.
- B. Repeat **Step 1** and **3** in **Option 1**.

Quick Linkage for Cabled Camera

- A. Connect camera to Vault Live's uplink router or switch with network cable.
- B. Repeat **Step 1** and **3** in **Option 1**.


LED Indicator Status

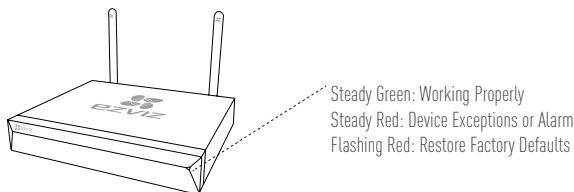


Linking through Phone

EN

1. Download the App in your Phone (Optional).
 - Search for "EZVIZ" in the App Store/Google Play™ to download and install the App.
 - Launch the App.
 - Register an EZVIZ user account.
2. Add the Vault Live.
 - Log into the EZVIZ App.
 - Click "+" on the upper-right corner to go to QR code scanning interface.

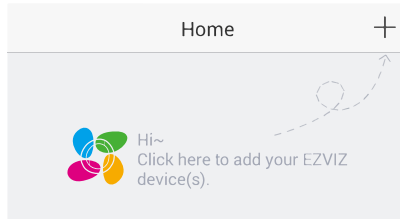

- Scan the QR Code of Vault Live with the EZVIZ App and add it.

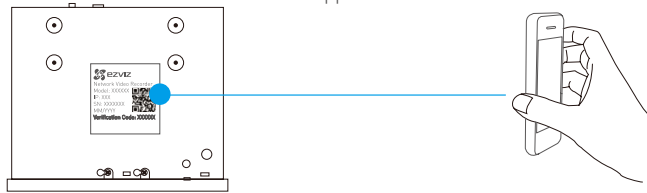


3. Open the Vault Live in the EZVIZ App.
4. Click "+" to add camera(s).


Appendix

HDD Installation


1. Loosen six screws No.1 to 6 on the back and both sides of the device to take apart the cover.

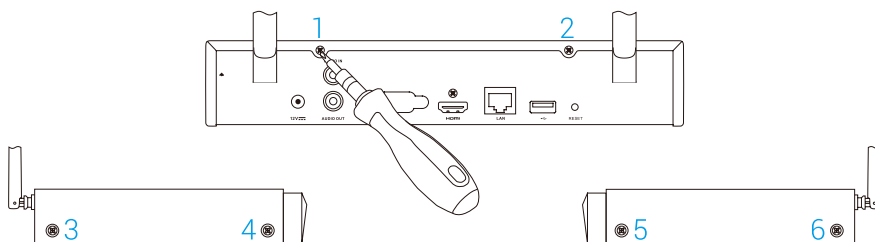


2. Connect the data cable and power cable of Vault Live with HDD respectively.

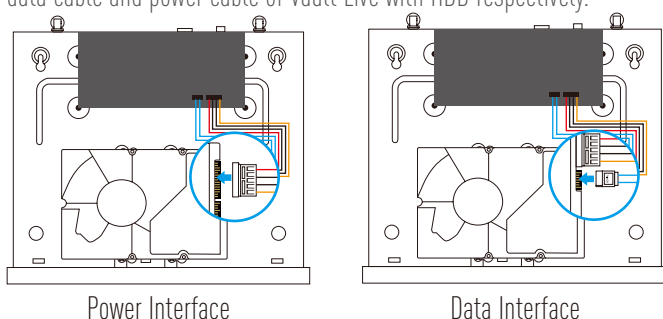


3. Use screws (No. 7, 8, 9, 10) to fix the HDD.

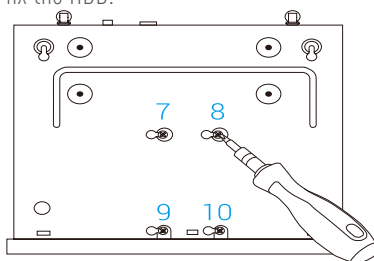

4. Re-assemble the Vault Live with screws (No.1 to No. 6).

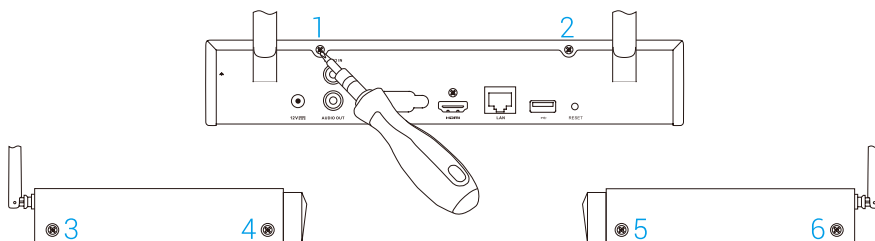


Pakendi sisu

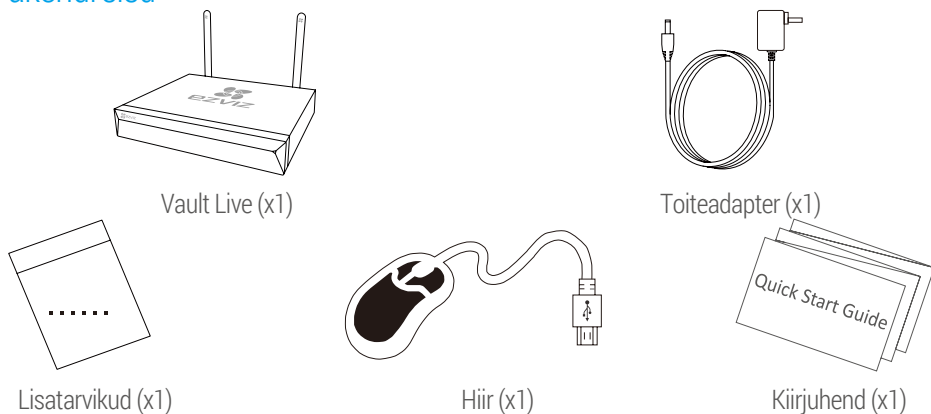

i Kõvakettaga varustatud mudelite puhul lisatarvikuid pakendis pole.

Toode


Tagapaneel

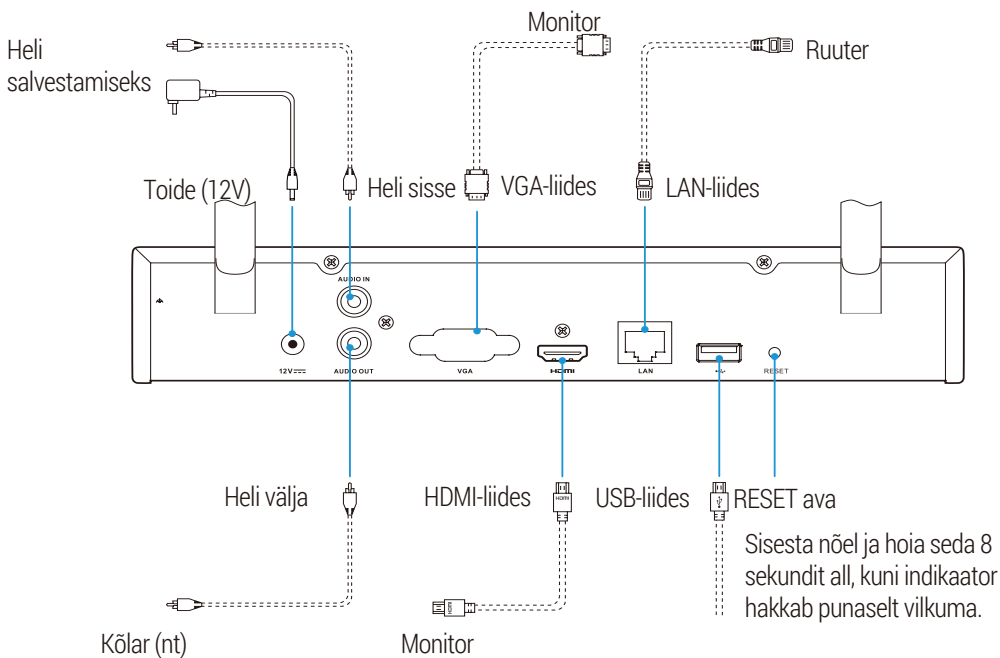


i Punktirjoonega tähistatud juhtmed ei kuulu komplekti.

Juhtme ühendamine

1. Ühenda Vault Live LAN-liides võrgujuhtme abil ruuteriga.
2. Ühenda hiir Vault Live USB-liidesega.

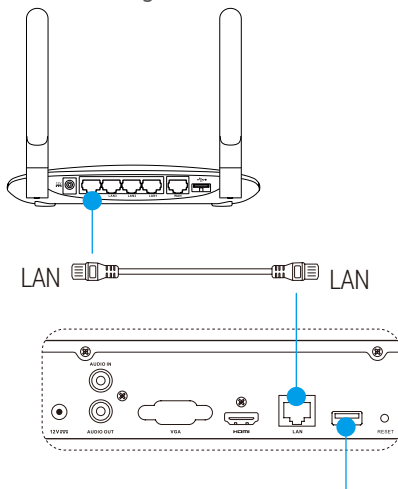

3. Ühenda Vault Live VGA või HDMI juhtme abil monitoriga.

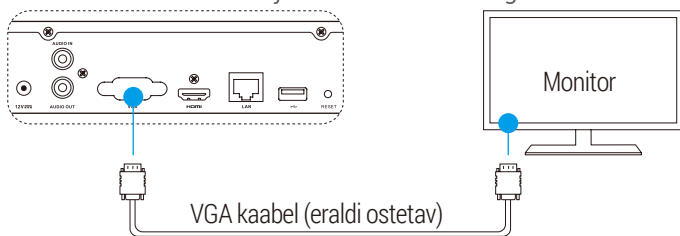


Seadistamine

Sisse lülitamine

ET

i Kaamera peaks asuma Vault Live seadmest 10m (32.8ft) kaugusel.

1. Ühenda Vault Live toiteadapteri abil vooluvõrku.

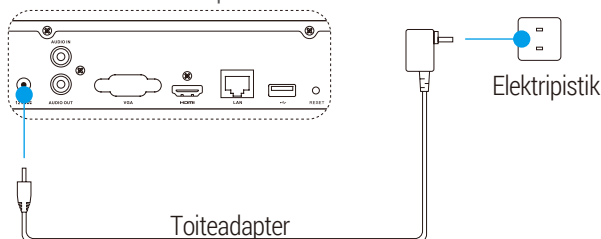


i Kasuta garantii tühistumise ja seadme kahjustumise vältimiseks stabiilset energiaallikat.

2. Oota käivitusviisardi ilmumist monitorile ja määra salasõna (esmakasutamisel).
3. Logi Vault Live kontoga sisse.

(Lisavõimalus) Välja lülitamine

1. Leia Vault Live (Monitor) kasutajaliideses menüü kaudu valik **Shutdown** ja klõpsa sellel.

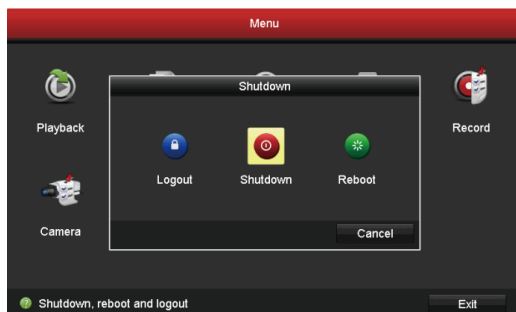

2. Vali **Yes**.

i Ära lülita välja seadet, mis on endiselt töös.


Ühendamine

Ühendamine läbi monitori

Lülita kõik seadmed enne alustamist sisse.


Juhtmevaba kaamera kiirühendus

i Lähtesta kaamera, kui see on olnud juba varasemalt juhtmevabasse võrku ühendatud.

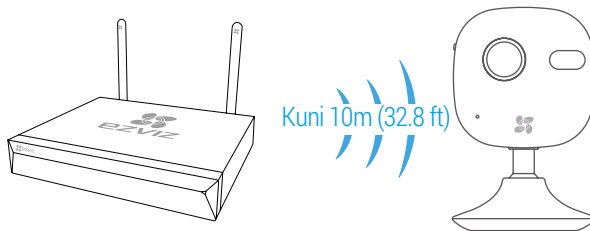

1. võimalus:

1. Leia **Camera Management**, valides **Menu** → **Camera**.

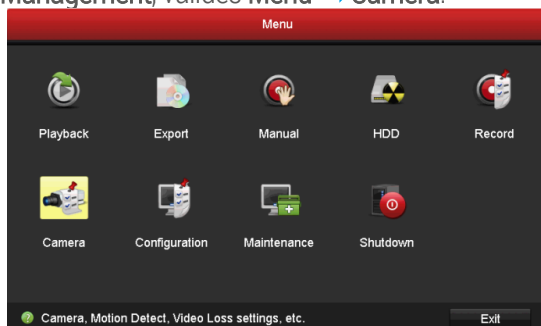

2. Kui kaamera on juhtmevaba võrguga ühendamiseks valmis, vali **Search**.

 Kaamera ühendub automaatselt Vault Live seadmega.

3. Klõpsa seotud kaamera lisamiseks "+" nuppu.

2. võimalus:

- A. Ühenda kaamera Vault Live üleslaadimisruuteri või -lüliti abil juhtmevabasse võrku.


- B. Korda **samme 1** ja **3 1. võimaluse** all.

Juhtmega kaamera kiirühendamine

- A. Ühenda kaamera võrgujuhtme abil Vault Live üleslaadimisruuteri või -lülitiga.


- B. Korda **samme 1** ja **3 1. võimaluse** all.

LED-indikaatori olek

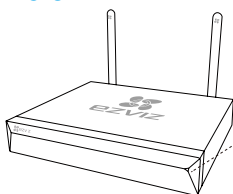


Stabiilne roheline: Seade töötab korralikult
Stabiilne punane: Seadme erandolek
Vilkuv punane: Taasta tehaseseaded

1. Lae enda telefoni rakendus (valikuline).
 - Otsi App Store/Google Play™ poest üles "EZVIZ" rakendus ja paigalda enda telefoni.
 - Käivita rakendus.
 - Registreeri EZVIZ kasutajakonto.
2. Lisa enda Vault Live.
 - Logi EZVIZ rakendusse sisse.
 - Klõpsa ülemises paremas nurgas oleval "+" sümboolil või vali QR-koodi skaneerimise liides.

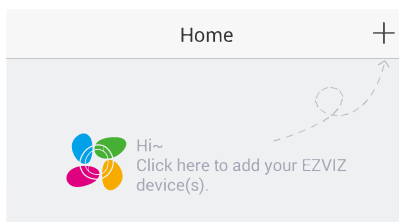


- Skaneeri Vault Live QR-kood EZVIZ rakendusega ja lisa seade rakendusele.

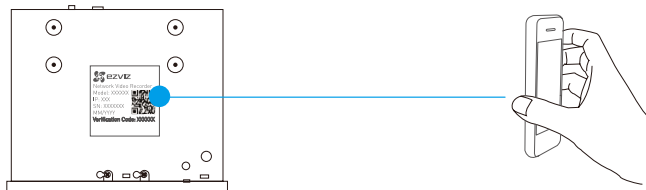


3. Ava Vault Live EZVIZ rakenduses.
4. Klõpsa kaamerate lisamiseks "+" sümboolit.

Kõvaketta paigaldamine


1. Keera seadme tagaküljel ja mõlemal küljel olevad kruvid 1 kuni 6 lahti ja eemalda korpus.

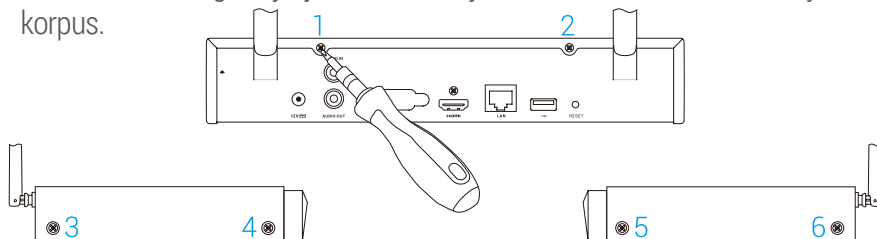

2. Ühenda Vault Live toitejuhe ja andmekaabel kõvakettaga.

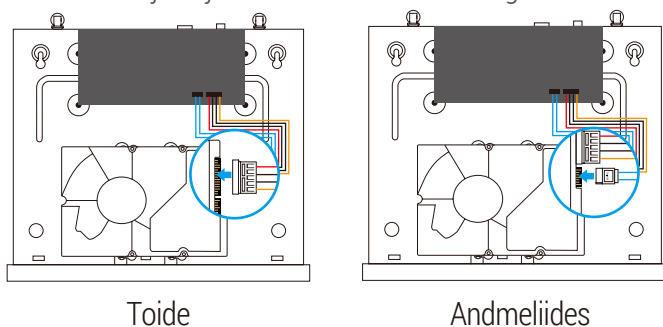

3. Kasuta kõvaketta kinnitamiseks kruvisid (nr 7, 8, 9, 10).

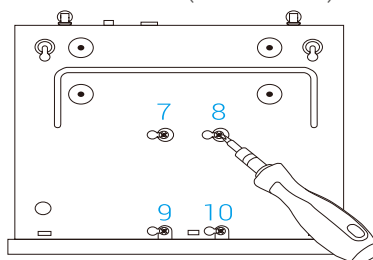

4. Paigalda Vault Live korpus samade kruvidega (nr 1 kuni 6) tagasi oma kohale.

